


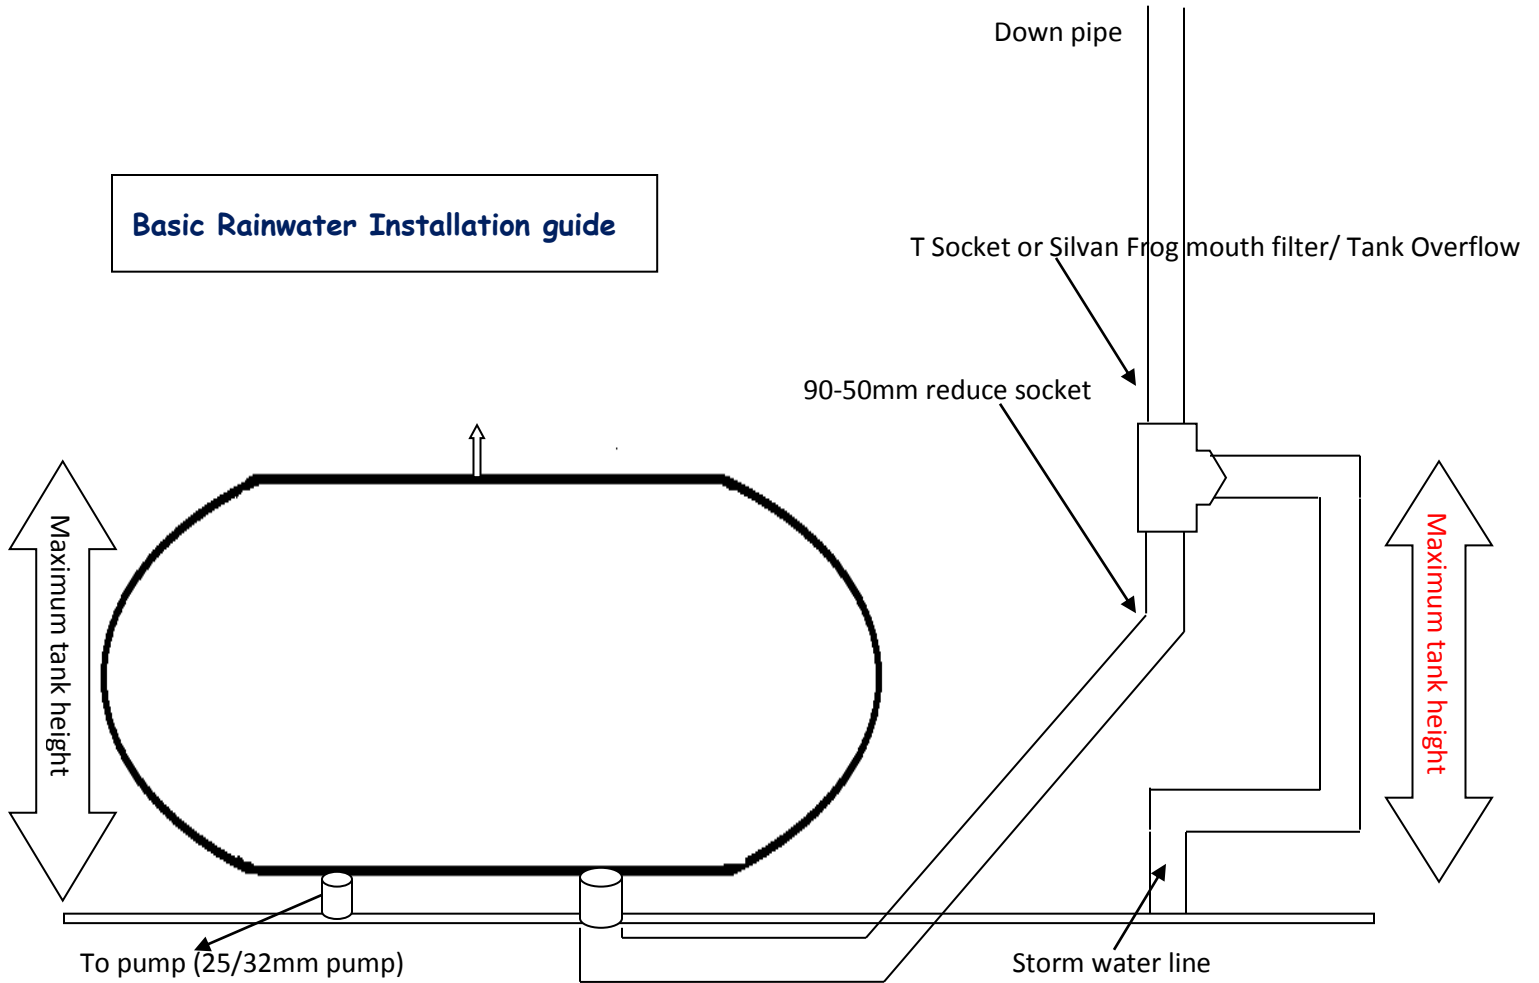

Basic Rainwater Installation guide



INSTALLATION INSTRUCTIONS

- Prepare the installation area, if the installation surface is not smooth remove anything that may penetrate or abrade the bladder.
- Use either a sand bed or ground sheet as a protective layer between the bladder and the ground.
- Lay the Bladder in the designated installation area ensuring that you have placed it with even spacing between the bladder and surrounding objects (stumps, walls) etc.
- When plumbing the bladder in ensure to place the T Socket or First Stage Filter no more than the maximum filling height of the tank. This acts as the overflow system into the stormwater.

Please note: It is advised that you use an inline filter system such as a Silvan Frogmouth or first flush style filter system to reduce / prevent leaves from entering the bladder.

Standard bladders come with either one 90mm or 100mm inlet and 25mm or 32 mm outlet located at underneath the bladder.

Fleximake take no responsibility for any installation errors. If you have questions please call and we can assist with advice.